

Codes for Toshiba DVD - 2832

15301 -	12677 DVD Menu	12421 Play Mode
60805 0	51269 Eject	44933 Power
61829 1	24261 Enter	07365 Repeat A-B
15301 100	35525 Exit/Cancel	08389 Return
61317 2	41413 Favorite Down	46021 Search Forward
62341 3	24773 Favorite Up	12741 Search Reverse
60549 4	36229 Game	28293 Setup
61573 5	29317 Input	41605 Skip Forward
61061 6	15301 Jump	45701 Skip Reverse
62085 7	33861 Marker	45189 Sleep
28037 8	28293 Menu	28869 Slow Forward
29061 9	63941 Menu Down	28229 Slow Reverse
46789 Angle	41413 Menu Left	44229 Stop
41925 Audio Select	24773 Menu Right	64197 Subtitle
35525 Cancel	62917 Menu Up	10949 Top Menu
12933 Channel Down	44421 Mute	56101 TV/DVD
45701 Channel Return	51269 Open/Close	11909 Volume Down
13189 Channel Up	44485 Pause	12165 Volume Up
41605 Closed Caption	08581 Picture Size	29317 Zoom
11397 Display	45253 Play	