

Codes for TV 2051 (Samsung?)

00731 Delete	00344 Exit	00635 Previous Channel
00635 Digit Enter	00354 Extra	00629 Program Down
00630 DP	00430 Family Story	00587 Program List
00372 DVI	00630 Fastext Blue	00697 Program Source
00632 HDMI	00372 Fastext Green	00375 Program Up
00394 Lock	00324 Fastext Red	00627 Recommend
00405 MagicInfo	00632 Fastext Yellow	00553 Record
00491 MagicInfoLite	00420 Favorite Channel	00324 Red
00645 MDC	00420 Favorite Program	00296 Remote Setup
00324 PC	00372 Green	00485 Return
00377 Symbol	00554 Guide	00485 Return/Back
00731 -	00323 HDMI	00437 SAP
00731 -/--	00593 HDMI 1	00651 Search
00377 0	00286 HDMI 2	00293 Search Forward
00692 1	00687 HDMI 3	00680 Search Reverse
00377 10	00432 HDMI 4	00581 Select
00533 11	00621 History	00294 Skip Forward
00281 12	00363 Hotapps	00357 Skip Reverse
00440 2	00320 IEEE1394 1	00443 Sleep
00438 3	00718 IEEE1394 2	00581 Slideshow
00258 3D	00466 IEEE1394 3	00521 Smart Hub
00565 4	00437 I-II	00708 Social TV
00313 5	00506 Info	00347 Sound
00311 6	00387 Info.L	00347 Sound Effects
00308 7	00506 Information	00347 Sound Mode
00568 8	00697 Input	00697 Source
00566 9	00612 Install	00285 Sports
00324 A	00334 Install Front Ceilin	00582 SRS
00347 Accompany Effects	00291 Install Front Floor	00624 Status
00474 AD	00546 Install Rear Ceiling	00437 Stereo Switch I-II
00728 AD	00594 Install Rear Floor	00423 Still
00602 Alarm	00282 Instruction	00678 Stop
00372 Alarm	00282 Instruction manual	00728 Subtitle
00652 Amazon	00387 Internet	00282 Support
00406 Antenna	00387 Internet@TV	00704 S-Video 1
00642 Anynet+	00503 Item	00336 S-Video 2
00521 Application Store	00234 Jog Dial Down	00531 S-Video 3
00370 Aspect 14:9	00261 Jog Dial Up	00596 Teletext
00460 Aspect 16:9	00437 Language	00596 Text
00723 Aspect 4:3	00635 Last Channel	00344 Text Cancel

00720 Aspect Format	00697 List/FLOF	00299 Text Expand
00463 Aspect Panorama	00572 Media Play	00485 Text Hold
00363 Aspect Zoom 1	00572 Media Player	00503 Text Index
00465 Aspect Zoom 2	00503 Menu	00697 Text List
00279 Auto Config	00713 Menu Down	00596 Text Mix
00372 B	00456 Menu Left	00697 Text Mode
00635 Back	00711 Menu Right	00251 Text Off
00485 Back	00453 Menu Up	00629 Text Page Down
00630 Blue	00264 Mode	00375 Text Page Up
00632 C	00367 More	00506 Text Reveal
00372 Cable	00437 MTS	00299 Text Size
00246 Camera	00314 Mute	00554 Text Store
00728 CC	00403 Netflix	00587 Text Store
00629 Channel Down	00581 OK	00635 Text Subpage
00581 Channel Enter	00503 Option	00635 Text Timed Page
00587 Channel List	00629 Page Down	00596 Text/Mix
00375 Channel Up	00375 Page Up	00443 Timer
00728 Closed Caption	00369 Pairing	00443 Timing
00702 Component 1	00551 Pause	00299 Tools
00317 Component 2	00341 Picture	00251 TV
00333 Component 3	00341 Picture Effects	00695 TV Power
00521 Content	00341 Picture Mode	00683 TV/DTV
00246 Custom	00540 Picture Mode Custom	00621 Usage Record
00578 D	00288 Picture Mode Dynamic	00449 Vertical Keystone
00630 D	00238 Picture Mode Movie 1	00329 VGA/PC 1
00578 Data	00240 Picture Mode Movie 2	00237 VGA/PC 2
00581 Digit Enter	00498 Picture Mode Standar	00444 Video 1
00521 Digital Entertainmen	00492 Picture Mode User 1	00339 Video 2
00506 Display	00243 Picture Mode User 2	00588 Video 3
00459 DMA	00495 Picture Mode User 3	00351 Voice
00437 Dual	00534 Picture Size	00571 Volume Down
00437 Dual I-II	00423 Picture Still	00698 Volume Up
00575 DVI 1	00725 PIP	00572 WiseLink
00591 DVI 2	00426 Play	00363 Yahoo!
00636 E.Mode	00695 Power	00363 Yahoo!/Hotapps
00282 E-Manual	00509 Power Off	00632 Yellow
00394 Energy Saving	00257 Power On	00534 Zoom
00581 Enter	00394 Power Saving	00534 Zoom In

